

AFR-200

RX fiber receiver



Illustration 1: This picture will be updated.

Instructions :

1-Power : AC power supply 110-240V 50/60Hz

2-Fiber : Neutrik Opticalcon Duo APC or LC/APC fiber optics cables linked to fiber emitter (AFB250)

3-RF out : RX out antennas A and B (50ohms)

4-Led indications :

Power : Green color lights up when the device is on

Optical ON : Green colour indicates that optical converter is active

Optical IN : Green indicates that received optical signal is good. Blink if the optical signal is attenuated from -3 to -6dB. Under -6dB the led is OFF.

More informations on www.bs-rf.com or contact us at contact@bs-rf.com

BSRF SAS - 31 boulevard Anatole France 93200 Saint Denis FRANCE